KAISER NIENHAUS
Komfort & Technik GmbH

Blind Switch, Flush-mounted
for roller shutter motors
Item no.: 321112, 321113

Installation and Operating Instructions

View, Description

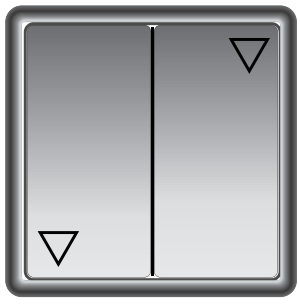

To operate the motor, press the button for the desired direction. When the switch is on in one direction, the other direction is locked. To avoid damaging the switch, never press the second button at the same time. To run the motor in the other direction, first reset the first button and then start the motor in the other direction.

Technical Data

Mains voltage:	230V, 50Hz
Switching capacity:	10A
Temperature range:	0-50 °C
Terminals:	max. 1.5mm^2

CE

Safety Instructions

The electrical connection may only be carried out by an approved electrician in accordance with the wiring diagrams shown in these instructions. Observe the VDE regulations, especially in damp rooms. The VDE regulations contain mandatory protective measures. Failure to do so poses a danger to life! Installation and connection work must always be carried out with the power disconnected; to do this, the supply lines must be disconnected from the mains on all poles and secured against being switched on again. Disconnection from the mains must be made with switching devices that guarantee a contact gap of at least 3mm. Make sure that nobody is within the travel range of the roller shutters and that nothing can block the movement of the curtains. These operating instructions must be observed and are part of the device and of our warranty conditions.

Wiring diagram
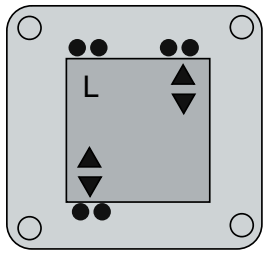
If the motor runs in the wrong direction, swap the up and down connections.